


What it is

A Geofence is a point or area on a map that can trigger events when a vehicle arrives or leaves a set location.

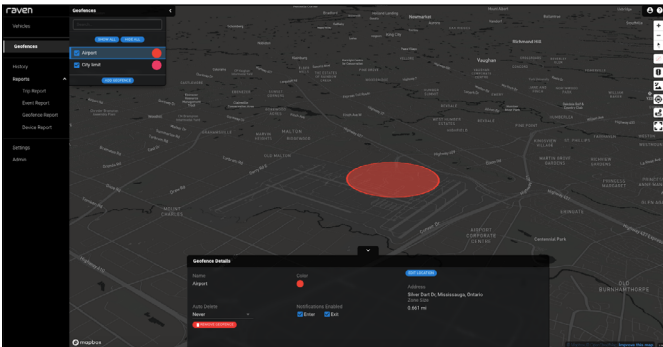


Setting up Geofences in the Raven Connected web app

How to use it


1. From the Web App select the Geofence tab on the left-hand side, then select 'Add Geofence'.
2. Drag the map or search the location where you would like to place the geofence.
3. To change the size of the geofence, click and drag the arrows.
4. Adjust Geofence settings under the details panel, including name, color, expiration, and notifications, then click Save Location.

Set up geofences with a step-by-step [video](#).

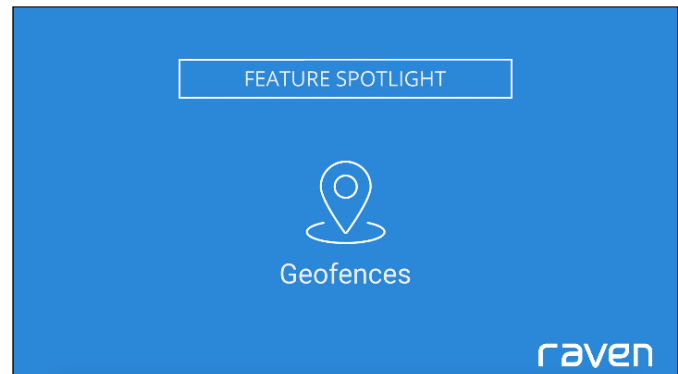

How it works

Point-based geofences provide the ability to receive live notifications and create reports based on the interaction of your vehicles. Identify job sites, city limits, or other areas of importance on the map to track when vehicles arrive/leave the location and know how long they were there.

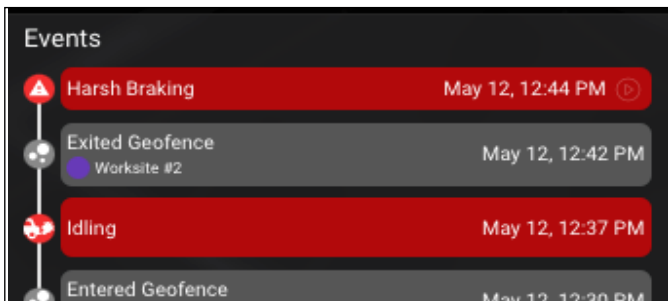

Geofence enter and exit alerts in the details panel